




Vax Service line: AU: 1300 361 505  
NZ: 0800 800 900

# Machine Overview

VCC-05 & VCC-07

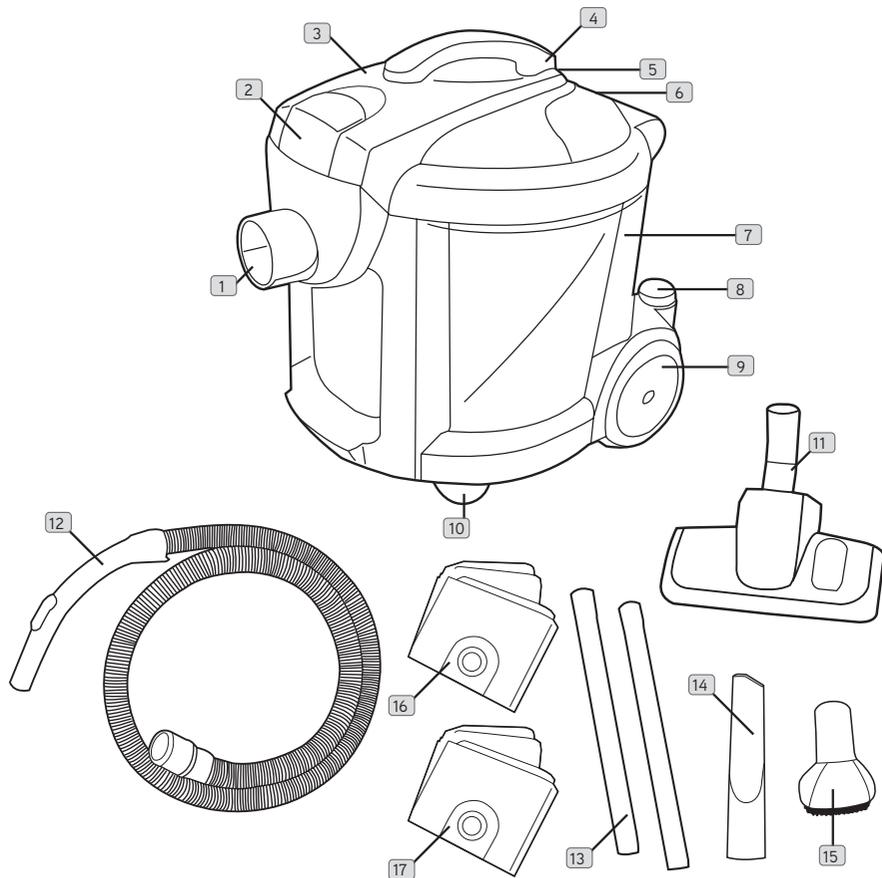

- 1 Hose inlet
- 2 Top cover retainer clip
- 3 Top cover
- 4 Carry handle
- 5 Power cord storage
- 6 Parking slot

- 7 Exhaust grill
- 8 On/off button
- 9 Wheel
- 10 360° rotating casters
- 11 Combination floor tool
- 12 Flexible hose

- 13 Extension tubes
- 14 Crevice tool
- 15 Dust brush
- 16 Paper dust bags  
VCC-05 (x3) VCC-07 (x2)
- 17 Cloth dust bag (x1)  
VCC-07 only

# General Safety Information

## FOR COMMERCIAL USE ONLY.

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. This appliance is for dry use only and is not to be used or stored outdoors or in wet conditions.
2. Turn off the vacuum cleaner controls before connecting to or disconnecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose.
4. This appliance is not intended for use by young or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
5. Use only as described in this manual. Use only the manufacturer's recommended attachments. This appliance is suitable for commercial use, for example in hotels, schools, hospitals, factories, shops, offices and rental businesses.
6. Do not use the vacuum cleaner with a damaged cord or plug. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Return the vacuum cleaner to a Vax Authorised Service Agent for examination, repair or adjustment. Regularly examine the power cord for damage, such as cracking or ageing. If damage is found replace the cord before further use.
7. Do not pull or carry by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
8. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
9. Do not put any objects into openings. Do not use with any openings blocked and do not restrict air flow. Keep all openings free of dust, lint, hair or anything that may reduce airflow.
10. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
11. Do not pick up hot coals, cigarette butts, ash, matches or any hot, smoking or burning objects.
12. Do not pick up flammable, hazardous dust or combustible materials (lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapours.
13. Do not vacuum up harmful or toxic material (chlorine bleach, ammonia, drain cleaner, etc).
14. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.

15. Do not vacuum plaster dust, concrete dust or any other building or vitreous materials.
16. Do not vacuum baking soda or any other powder-based carpet refresher or deodoriser.
17. Do not use with blocked filters and without the filters in place.
18. Use extra care when vacuuming on stairs.
19. Keep vacuuming area well lit.
20. Store the vacuum cleaner indoors in a cool, dry area.
21. Turn off the switch before unplugging.

### Motor Thermostat



**IMPORTANT:** The motor is equipped with a thermal cut-out. If for any reason, the vacuum cleaner should over-heat, the thermostat will automatically turn the unit off. Should this occur, unplug the vacuum cleaner from the electrical outlet and turn off the switch. Remove the dirt container and empty. Clean the filters. Allow the cleaner to cool for approximately one (1) hour before re-starting.



**WARNING:** Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.



**CAUTION:** The vacuum cleaner is a very powerful unit. Before plugging the cord into the outlet make sure the switch is in the 'off' position. Hold the vacuum cleaner firmly when starting.



**IMPORTANT:** If the inlet or hose is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting.



**IMPORTANT:** It is very important that filters are kept clean to obtain maximum performance from your vacuum cleaner. Not cleaning and not replacing your filters regularly can reduce the suction power and cause overheating and permanent damage to the vacuum cleaner.


This appliance is suitable for commercial use.

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER USE.

DAMAGE TO THE VACUUM CLEANER CAUSED AS A DIRECT RESULT OF NOT ADHERING TO THE GENERAL SAFETY INSTRUCTIONS IN THIS USER GUIDE INVALIDATES THE WARRANTY.


# Operation

## How to assemble

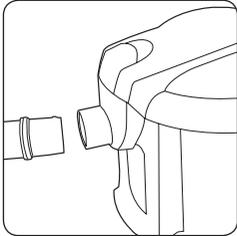


Insert the flexible hose into the inlet on the main body of the vacuum cleaner.

Turn the hose clockwise until it cannot be turned any further.

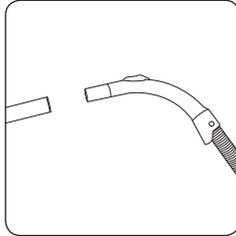

Push the extension tube on to the end of the handle. The extension tubes can be used together to lengthen or shorten by using one section of the extension tube as required.

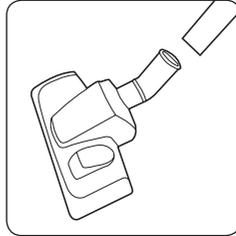

Fit the combination floor head by pushing onto the extension tube.

## Accessories

The accessories can be attached directly to the handle by removing the extension tube and pushing in the desired accessory.


The accessories can also be attached to the extension tube for extra reach. Remove the combination floor head and push on the desired accessory.

**Crevice Tool:** for crevices, corners, cracks, sills, etc.

**Dusting brush:** for delicate surfaces.

# Operation

## How to operate

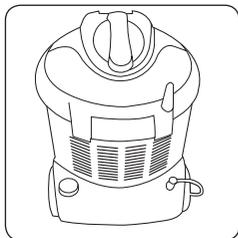


Fully unwind the power cord.

### On/Off Button


Insert the power plug into the electrical outlet.

Ensure the vacuum cleaner is switched off. Press the on/off button located at the rear of the machine to turn on and press the button again to turn the vacuum cleaner off.

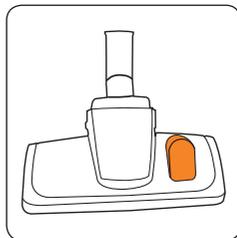


### Carpet Cleaning

For carpet and rug cleaning press the rocker switch on the combination floor head to raise the brushes.

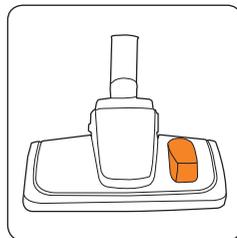


### Hard Floor Cleaning

For hard floor cleaning, press the rocker switch on the combination floor head to lower the brushes.

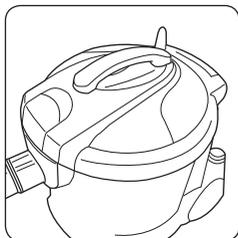


### Carry Handle

Use the carry handle located on the top of the machine to move the vacuum cleaner from room to room.

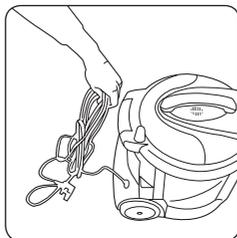

### Cable Storage

After use, turn the vacuum cleaner off and unplug from the electrical outlet. Wrap the cord around the cable storage hook for moving the unit from room to room or for storage.

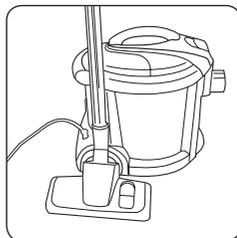


### Hose Storage

For convenience there is a parking slot located on the side of the vacuum cleaner where the floor tool and hose can be parked for carrying and storage.

# Maintenance (Keep your Vax as good as new)


## Dirt container removal and replacement

-  **IMPORTANT:** Always unplug the vacuum cleaner from the electrical outlet before removing the dust bag.
- IMPORTANT:** DO NOT use the vacuum cleaner without ALL of the filters in place.

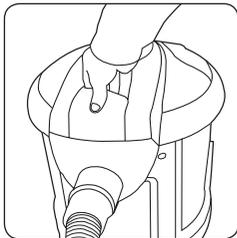

### Dust Bag Replacement

Turn off the vacuum cleaner and unplug it from the mains. Remove the hose. Unclip the retainer clip on the top of the unit and lift up to gain access to the dust bag compartment.

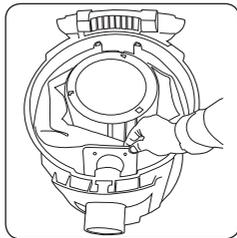


Lift out the full dust bag and dispose of it. Insert a new dust bag into the vacuum cleaner. Align the front of the dust bag with the air entrance.


**NOTE:** The seal ring around the dust bag opening should cover the air entrance connector inside the housing.

## Pre-motor filter (Model VCC-05 only)


Turn off the vacuum cleaner and unplug it from the electrical outlet.

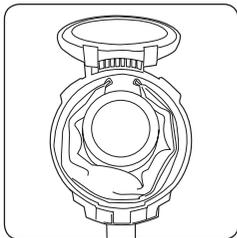

Unclip the retainer clip on the top of the vacuum cleaner and lift up to gain access to the dirt container department.

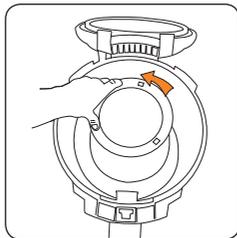


The pre-motor filter is found in the centre of the dirt container. Rotate the filter retaining disc anti-clockwise to gain access to the filter.

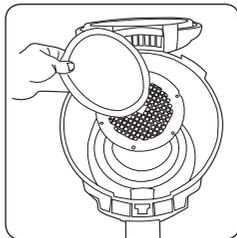

The pre-motor filter can be lifted out.

**NOTE:** Vax recommends replacing the pre-motor filter every 3-6 months depending on the level of use or when it becomes discoloured.

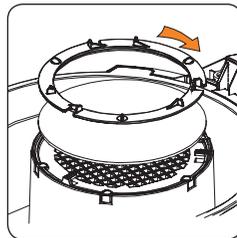


Replace with a new filter inside and turn the retaining disc clockwise to secure.


# Maintenance (Keep your Vax as good as new)

## HEPA Pre-motor filter (Model VCC-07 only)

Turn off the vacuum cleaner and unplug it from the electrical outlet.

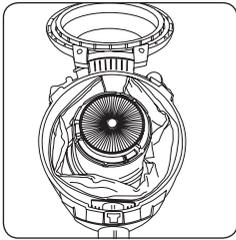


Unclip the retainer clip on the top of the vacuum cleaner and lift up to gain access to the dirt container department.

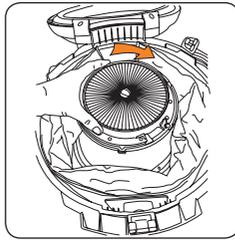

The HEPA pre-motor filter is found in the centre of the dirt container.

Rotate the filter clockwise to remove.

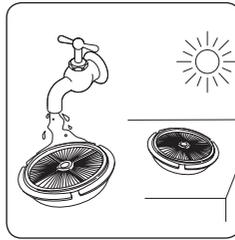

Gently tap the filter against the side of the rubbish bin to remove excess dirt. The filter may then be rinsed in cool water. Allow to thoroughly air dry before replacing.

Replace the filter every 3-6 months depending on usage or when the filter becomes discoloured.


**NOTE:** Do NOT use any detergents or boiling water to wash the filter.

Replace the HEPA filter back in the machine before use.

Ensure filter is thoroughly dry before replacing after washing.

## Clearing blockages

**WARNING:** To reduce the risk of injury, the power cord must be disconnected before performing maintenance or troubleshooting checks.

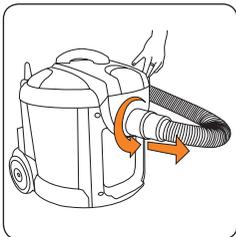

Turn vacuum cleaner off and disconnect the power plug from the electrical outlet.

The flexible hose can be disconnected from the vacuum cleaner by rotating anti-clockwise and pulling away from the machine. Remove any blockages found then reconnect the hose.

# FAQ's



**WARNING:** To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/troubleshooting checks.

Problem	Cause	Solution
Cleaner won't run	Not properly plugged into electrical outlet.	Plug unit in firmly.
	Vacuum cleaner not turned on.	Press on/off button.
	No electricity in the electrical outlet.	Check fuse or breaker.
	Blown fuse/tripped breaker.	Reset circuit breaker or replace fuse.
	Motor thermostat has tripped.	Switch off and unplug the vacuum cleaner. Leave for one (1) hour. See page 3.
Cleaner won't pick up/loss of suction	Dust bag not installed correctly.	Review dust bag removal and replacement.
	Dust bag full or blocked.	Replace dust bag. Empty/clean/replace cloth bag
	Clogged filter.	Remove/replace with new filter VCC-05. Remove wash/replace HEPA filter VCC-07.
	Blockage in hose.	Disconnect hose, remove the obstruction then re-fit.
Accessories won't pick up	Accessories are not attached correctly.	Refer to page 4 for fitting information.
Dust escaping from the vacuum cleaner	Dust bag full.	Dispose of paper dust bag, replace with a new one or empty/clean/replace cloth bag.
	Dust bag not installed correctly.	Review dust bag removal and replacement.
	Hose is not installed correctly.	Review hose installation.
	Filter not installed completely.	Review filter removal and replacement.

## we're here to help

Instead of taking me back to the shop, simply call:

**AU: 1300 361 505**  
**NZ: 0800 800 900**

[vax.com.au](http://vax.com.au)

This does not affect your statutory rights

# Other Information

## Vax Service & Help

### Vax Careline:

Australia 1300 361 505

New Zealand 0800 800 900

Monday-Friday 8.30am to 5.00pm

If you have queries or concerns about using your Vax, call the Vax Careline. Calls are charged at the standard local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling.

For the nearest Service Agent, please call the Vax Customer Careline or visit [vax.com.au](http://vax.com.au)

## Technical Specification

Voltage: 220-240V ~50Hz

Wattage: VCC-05 1400W  
VCC-07 1500W

Capacity: VCC-05 6L  
VCC-07 8L

Filters: VCC-05 Pre-motor cloth  
VCC-07 Pre-motor HEPA

Cord length: 12m

Weight: VCC-05 10.75kg  
VCC-07 12.85kg

Noise Level: VCC-05 81dBA  
VCC-07 84dBA

A-weighted sound pressure level L<sub>PA</sub>

Subject to technical change without notice.



Double Insulated



N197



Indoor Use

 


Read Instructions



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

# Notes





**Performance is everything.™**

Distributed by Techtronic Industries Australia Pty. Ltd.  
Level 1, 660 Doncaster Road, Doncaster, Australia 3108.  
[www.vax.com.au](http://www.vax.com.au) Service Line: AU: 1300 361 505 / NZ: 0800 800 900