

vax

Steam Fresh Pro
STEAM CLEANER

THE POWER OF
STEAM + DETERGENT

LET'S GET STARTED.

1 YEAR WARRANTY

VX87



vax.com.au
vax.co.nz

Let's talk safety



Basic safety precautions

This steam mop is intended for household use only and NOT for commercial or industrial use.

READ ALL THE INSTRUCTIONS BEFORE USING THIS APPLIANCE



WARNING: Danger of scalding

WARNING: The stick steam mop head gets very hot during operation.

- Only use the steam mop indoors away from rain and moisture and keep the area you're cleaning well lit
- Turn OFF the on/off switch on the steam mop controls before disconnecting or connecting from the mains supply
- Always unplug the steam mop and allow it to cool before connecting or disconnecting the hose or accessories or performing any maintenance
- Children should be supervised to ensure that they do not play with the appliance
- This appliance is not intended for use by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety

- Please refer to floor manufacturer's care recommendations before use, and test your flooring/carpet/rugs by running the steam mop over a small hidden area, if no pile distortion or no damage occurs continue cleaning. Not suitable for use on wax polished floors or furniture, acrylic surfaces and synthetic, velvet or steam/water sensitive materials
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the steam mop
- This steam mop should not be used to clean electrical appliances such as microwaves, oven, televisions and electrical heating systems etc
- Only Vax recommended cloths and detergent should be used with this steam mop. Using other detergents will invalidate the warranty

IMPORTANT: The steam mop is equipped with a thermostat and a thermal cut-out. If for any reason the unit should overheat, the thermostat will automatically turn the unit off. Should this occur, unplug the steam mop from the electrical outlet and turn off the switch. Let the unit cool, remove and empty the water tank. To re-start the machine, plug it into an electrical outlet and switch it back on.

IMPORTANT: We recommend the use of a Residual Current Device with a Residual Current rating of 30mA or less.

IMPORTANT: This steam mop may not be suitable for all floating floorboards or sealed floors – please check with your floorboard manufacturer first prior to use.

Let's talk safety



Don'ts

- Don't touch any hot areas/accessories on your steam mop
- It's normal for the steam mop and accessories to heat up during use, always allow them to cool down before handling
- Don't use the steam mop if it has been dropped, if there are visible signs of damage or if it is leaking, if it has been immersed in water or left outdoors
- Don't handle the plug or use the steam mop with wet hands
- Don't pull or carry this steam mop by the power cord
- Don't use the power cord as a handle, pull the power cord around corners or sharp edges or close a door over the power cord
- Don't attempt to remove blockages with sharp objects as this may cause damage to the steam mop, remove blockages only as instructed in this guide
- Don't unplug steam mop by pulling on the power cord or run over the power cord. If the power cord or plug is damaged please contact our Customer Care Line
- Don't aim the steam mop at people, animals, plants and electrical components such as interior of ovens or wires.
- Never touch the floor head from a short distance (there is a risk of scalding)
- Don't use the steam mop with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label



Do's

- Always make sure the concentration nozzle and accessories are securely connected to the handheld before use
- Always fill the clean water tank with water only, never add perfume, stain remover or products containing alcohol. Filling the clean water tank with hot or boiling water will damage the machine and invalidate your warranty
- Always make sure tanks are fitted correctly before using the steam mop
- Always vacuum your carpets thoroughly and ensure hard floor areas are free from grit and debris before using the steam mop
- Always carry the steam mop by the handle
- Always unplug the steam mop before carrying out any maintenance or when unattended
- Turn off all controls on the steam mop before disconnecting or connecting the power cord, after use always wrap the power cord around the cord clips provided
- Take extra care when cleaning on stairs
- Always protect the power cable from heated surfaces or near open flames

- Don't leave this steam mop unattended while it is connected to the supply mains
- Don't use this steam mop with a damaged cord or plug. If the supply cord is damaged return the steam mop to a Vax authorised Service Agent
- Don't use without the tank cap in place. Ensure that the water tank cap has been screwed down fully before use
- Don't use the steam mop to treat any items of clothing that are still being worn on the body
- Never immerse the steam mop in water or in other liquids
- Don't operate the steam mop without water in the tank
- Don't use the unit on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate steam or water sensitive materials
- Don't use on acrylic surfaces
- Don't overfill the tank. Do not exceed the maximum prescribed filling level. Please use the measuring jug and funnel included
- Don't use without the hard water filter in place

WARNING: Never leave the steam mop in one spot on any surface for an extended period of time as this may damage the floor surface.

- Store the steam mop in a cool, dry area away from children
- Before storing the steam mop please ensure all water/detergents tanks and hard water filter are thoroughly clean and dry
- The force and heat of the steam may have an adverse effect on some materials. Always check whether a surface is suitable for treatment with the steam by carrying out a test before hand on a concealed area
- The steam mop must be kept level during operation.
- Always remove the mains plug from the socket and allow the steam mop to cool down completely before topping up with water
- In wet rooms, e.g. bathrooms, connect the appliance to sockets with an RCD adaptor connected in series.
- Be very careful when cleaning tiled walls with sockets.

WARNING: Always switch off and unplug the steam mop from the electrical outlet before assembling, opening or emptying the water tank, or before connecting/disconnecting the attachments.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

Thank you for buying this Steam Fresh Pro.

Taking care of your sealed hard floors and surfaces

The Steam Fresh Pro is designed to make steam cleaning your sealed hard floors regularly, as effective and efficient as possible, and this user guide will help you get the most out of your machine.

Maintaining your sealed hard floors with the Steam Fresh Pro will ensure they keep looking beautiful, smell fresh and are hygienically clean.

Taking care of your Steam Fresh Pro

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your sealed hard floors.

We're here if you need us

For troubleshooting simply visit or call:

Australia: 1300 VAX AUS (1300 829 287)*

vax.com.au

New Zealand: 0800 VAX NZL (0800 829 695)*

vax.co.nz

*Monday – Friday: 8:30am -5:00pm

Calls are charged at the standard local rate. Please make note of the serial number and model number of the product before calling.

The VAX logo is displayed in a bold, orange, sans-serif font. The letters 'V', 'A', and 'X' are connected at the top, and the 'A' has a distinctive shape with a wide base and a narrow top.

Contents

 
-  [Let's talk safety](#)
-  [Getting to know your machine](#)
-  [Getting started](#)
-  [Using your machine](#)
-  [Taking care of your machine](#)
-  [What to do if it goes wrong](#)
-  [Getting in touch](#)

Steam Fresh Pro


Included with your machine



250ml detergent



2x Microfibre cleaning pad

 

Carpet glider

Getting to know your machine

Handle

Detergent trigger (hidden)

Twin tank release button

Twin tank

Hard water filter (hidden)

Detergent dial

On/Off switch

Floorhead



Handle release button

Quick cord release hook

Quick cord release hook

Floorhead release button

Carpet glider



Technical Specification

Name **Steam Fresh Pro**
Model **VX87**
Voltage **220-240V ~ 50Hz**
Wattage **1400-1600W**
Cord length **7m**
Weight **3kg**

Made in China.
Subject to technical change without notice.

Accessories & Consumables

Microfibre pet pads x 2 **VSPP**
Microfibre cleaning pads x 4 **VTHSP4**
Hard water filter **029158003008**
Spring Fresh 1Lt Detergent **VXS2**
Apple Pet 1Lt Detergent **VXS3**



This product meets applicable regulatory requirements



Indoor Use Only



Read Instructions

IPX4



*To purchase consumables and accessories, please visit vax.com.au




PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE

Assembling your steam mop




Push the main body down into the floor head until it clicks into place.

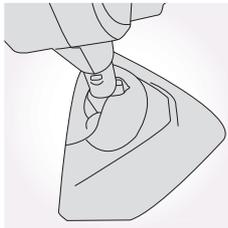

Stand the steam mop upright by pushing the main body forward to lock into position.




Push the handle into main body until it clicks into place.

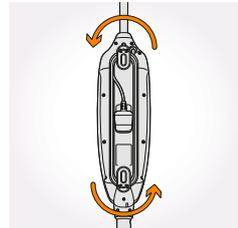

Wrap power cord around hooks for easy storage.

Assembling your steam mop

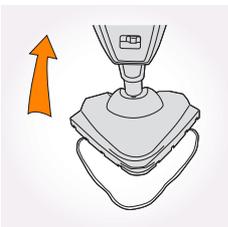


Place the cleaning pad on the floor white side facing up. Place steam mop onto pad making sure the entire pad covers the floor head.


Using your machine

WARNING: If you do not want to use detergent on your flooring, select 'OFF' on the detergent dial. Always test on an inconspicuous area of flooring first before using detergent or steam cleaner.

Filling twin water tank

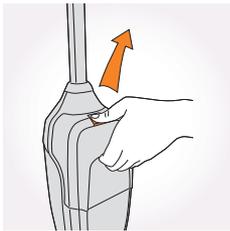

Press the twin tank release button and lift the twin tank by the handle.

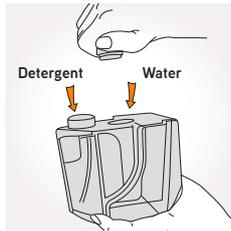


Twist water cap anti-clockwise and lift to remove.




Fill the water tank with 500ml of water, replace cap to tighten and twist clockwise.


Filling twin tank - detergent

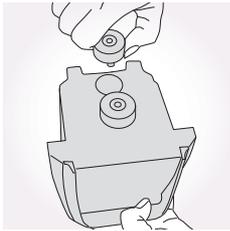


Twist the detergent cap anti-clockwise and lift to remove.

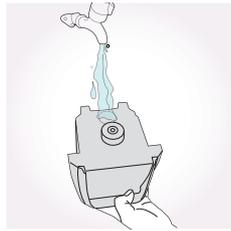

Pour 50ml of Vax detergent and 250ml of water into the detergent tank then replace cap and twist clockwise to tighten.

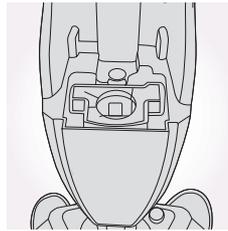

Before replacing the twin tank make sure the hard water filter is in place.

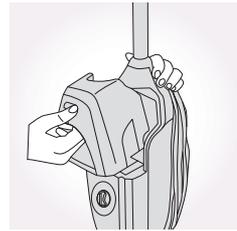


Align the twin tank and push until it clicks into place.

Using your machine


Before you begin cleaning

- The steam mop and accessories get very hot during use, always allow them to cool down before handling.
- Always unplug and switch off the steam mop when assembling and filling water and solution tank.
- Always switch off the steam mop before emptying the water tank or changing the cleaning pads/accessories.
- **IMPORTANT:** Please refer to floor manufacturer's care recommendations before use and test the steam mop on a discrete area of flooring to begin with. Check with flooring manufacturer for suitability on sealed floors prior to use.
- When using the steam mop, basic safety precautions should always be observed.
- Don't aim the steam mop at people, animals, plants and electrical components such as interior of ovens or wires. Never touch the steam burst or floor head from a short distance. (There is a risk of scalding)
- The steam mop is equipped with a thermostat and a thermal cut-out. If for any reason the steam mop overheats it will switch off. If this happens turn off and unplug the steam mop, allow to cool for a least 2 to 4 hours and re-start.


Using your machine

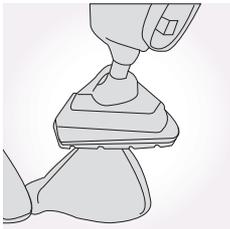


Place the microfibre pad on the floor white side facing up. Place the floor head onto the microfibre pad making sure it covers the entire floor head.

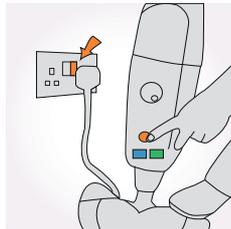

Plug into mains and slide switch to 'ON' position. The blue light will illuminate to show power on. The green light will illuminate to show the steam mop is ready to use.

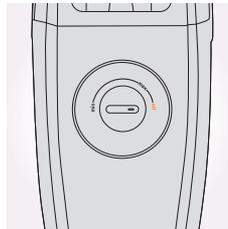


To steam your floors **without** detergent select 'OFF'. This is generally recommended for carpet and wood flooring.

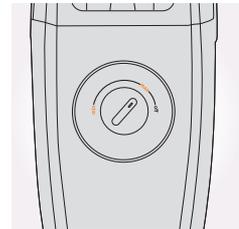

To use **with** detergent select min to max as desired. This is generally recommended for tile and vinyl flooring.



Place your foot onto the floor head and pull handle backwards to recline.

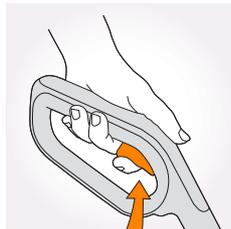

To produce steam, squeeze the trigger. To prevent over wetting floors avoid holding the trigger continuously.




Move the steam mop slowly backwards and forwards paying particular attention to high traffic areas*

*WARNING:


Never leave the steam mop in one spot on any surface for an extended period of time as this may damage the floor surface.

Using your machine


Refreshing carpets

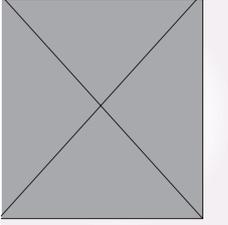


Place the microfibre pad on the floor white side facing up. Place steam mop onto pad making sure the entire pad covers the floor head.

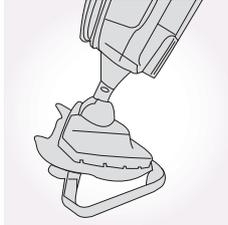

With microfibre pad attached, hook steam mop into the front of the carpet glider and push to clip into place. Carpet glider should only be used when refreshing carpets.

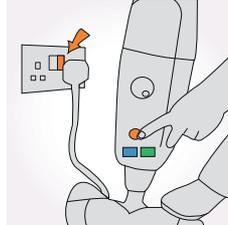


Plug into mains and slide switch to 'ON' position. The blue light will illuminate to show power on. The green light will illuminate to show the steam mop is ready to use.

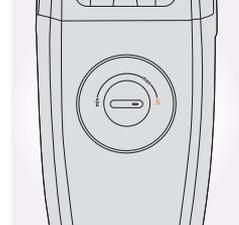


To refresh carpets select 'OFF' setting on the detergent dial.




Place your foot onto the floor head and pull handle backwards to recline.

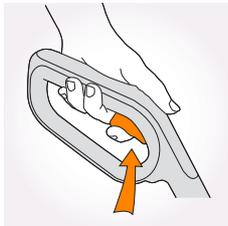

To produce steam, squeeze the trigger. To prevent over wetting floors avoid holding the trigger continuously.

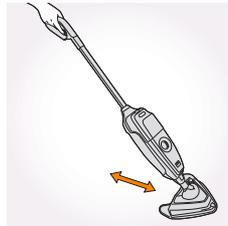

Move the steam mop slowly backwards and forwards across the carpet paying particular attention to high traffic areas.

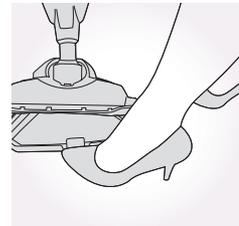

To release the carpet glider, place your foot on clip and push down. Lift steam mop to remove.

WARNING: Always turn OFF the steam mop when fitting the cleaning pads.


WARNING: When using on carpets, always make sure the microfibre cleaning pad is used and covers the floor head entirely before using the carpet glider. Only use the carpet glider when refreshing carpets.

IMPORTANT: Never use the steam mop without a cleaning pad attached to the floor head. Never leave the steam mop in one spot for extended period of time or with a damp or wet pad attached as this may damage the floors surface.


Taking care of your machine

IMPORTANT: Allow the steam mop to fully cool down before performing any maintenance or troubleshooting checks. Don't leave water or detergent in the twin tank between uses, as this can effect the machines performance, the twin tank needs to be emptied and rinsed after each use.

Emptying the twin tank

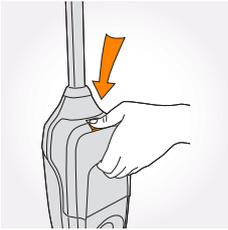

Press the twin tank release button and lift the twin tank by the handle.

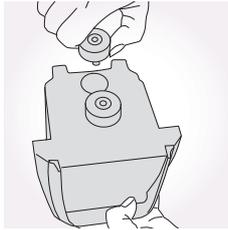


Twist water cap anti-clockwise and lift to remove.



Empty any excess water, replace water cap and turn clockwise to tighten.


IMPORTANT: Don't use bleach or fabric softener when washing the microfibre cleaning pad. Always allow the steam mop to fully cool down before removing the microfibre cleaning pad.

Cleaning the microfibre cleaning pad

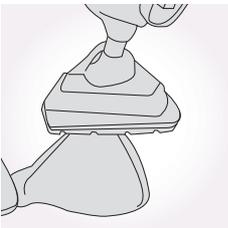


Hold corner of pad down with foot and lift steam mop to peel away.

 Max 40°C



The microfibre pad is machine washable (Max 40°C) allow to fully dry before use.

Storing your steam mop

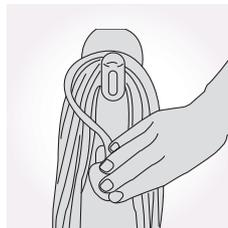


Wrap the power cord around the quick cord release hooks.


IMPORTANT: Don't operate the steam mop without hard water filter in place. The condition of the filter affects the performance of your machine, check and change filter periodically. If you live in an area of hard water the filter will discolour or darken over time. Depending on water hardness and frequency of use, the filter should be changed every 3 to 6 months or if the filter has discoloured.

Taking care of your machine


Replacing the hard water filter

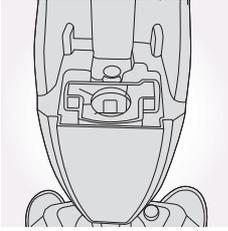

Remove twin water tank to access the hard water filter.

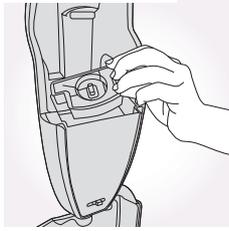

Lift to remove the hard water filter.

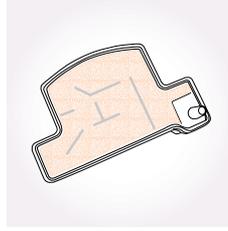


New filter - (beige/cream colour).



Hard water filter should be replaced every 3-6 months or when discoloured and darkened (dark orange).


Clearing blockages

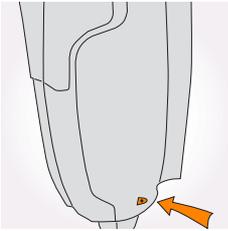


If there is an obstruction to the steam flow through the machine, steam may be released through the bleed valve.*



To remove the floor head from main body push the plastic clip and lift.

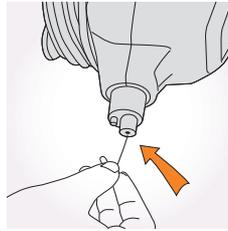

After floor head is removed, using a thin object such as a paper-clip (in the area shown), insert to remove the blockage.*

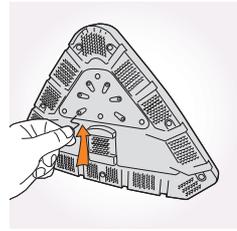

Remove cleaning pad and inspect steam mop base for blockages. If a blockage can be seen use a small thin object such as a paper-clip insert to remove.

***WARNING:** Ensure steam cleaner is completely cool before clearing blockages.

What to do if it goes wrong

Problem

There is an accessory missing.

Solution

- Check the 'This pack contains' panel on the box to make sure the part is included with your steam mop.
- If it is missing, we're here to help. Simply call us on
AUS: 1300 VAX AUS (1300 829 287)
/ NZ: 0800 VAX NZL (0800 829 695)

The steam mop won't turn on?

- Check the On/Off switch is in the On position.
- The plug may not be fully pushed into the electrical socket.
- Check the fuse in the plug if this needs replacing.

Why is the steam mop not producing steam/detergent?

- There may be no water in water tank, check the water tank has water.
- Check the water tank is securely fitted and the hard water filter is in place.
- Hard water filter may be blocked or discoloured and needs to be replaced.
- The water may not yet be at temperature, the green indicator light will be illuminated when its ready.
- Steam path may be blocked. Go to 'Let's talk technical' page.
- Putting detergent into the water tank can cause damage to the steam mop.
- Check correct setting has been selected, to use detergent selected vinyl or tile.
- Check the detergent has been diluted to correct strength.

Why won't the cleaning pad pick up dirt?

- The cleaning pad may already be saturated or dirty, wash the cleaning pad. Go to the 'Taking care of your machine' pages.

Why is steam coming from the side of the steam mop?

- Steam coming from the side of the machine indicates a blockage within the machine. To clear any blockages go to the 'Taking care of your machine' pages.

CAUTION: To reduce the risk of personal injury, unplug the product before performing maintenance/troubleshooting checks.



Getting in touch

Taking care of you

We're here if you need us. For trouble shooting, simply call or visit:

Australia: 1300 829 287*

vax.com.au

New Zealand: 0800 829 695*

vax.co.nz

*Monday-Friday 8.30am to 5.00pm

* Calls are charged at the standard local rate. Please make a note of the serial number and model number of the steam cleaner before calling.

Notes





Notes

Notes



vax

Distributed by

Techtronic Industries Australia Pty Ltd

31 Gilby Road, Mount Waverley, VIC 3149, Melbourne, Australia
Careline AU: 1300 VAX AUS (1300 829 287) www.vax.com.au

Techtronic Industries N.Z. Limited

2 Landing Drive, Mangere, Auckland, 2022, New Zealand
Careline NZ: 0800 VAX NZL (0800 829 695) www.vax.co.nz